



Standing Desk Workstation Installation Manual

UP4

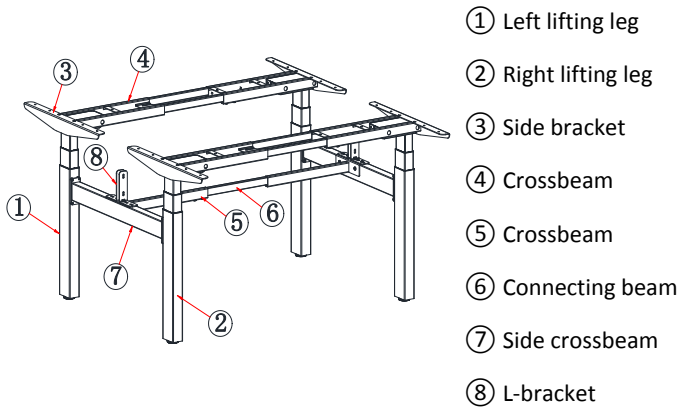


Step 1

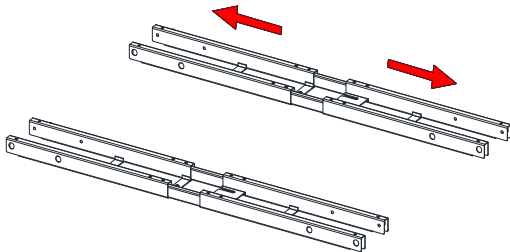


Fully separate the Crossbeams (part 4) you will find the Connecting beams inside.

Step 2

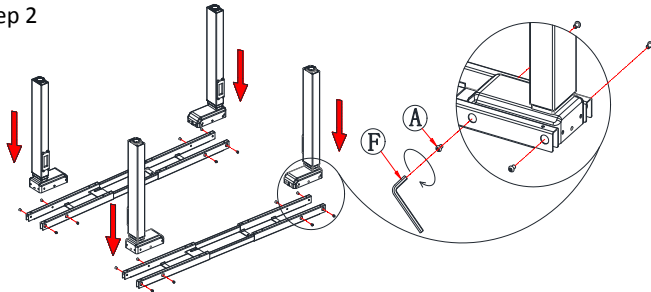

Attach the Lifting leg (parts 1 and 2) to the Crossbeam (part 4) using (part A) Screw M6x10.


Step 3

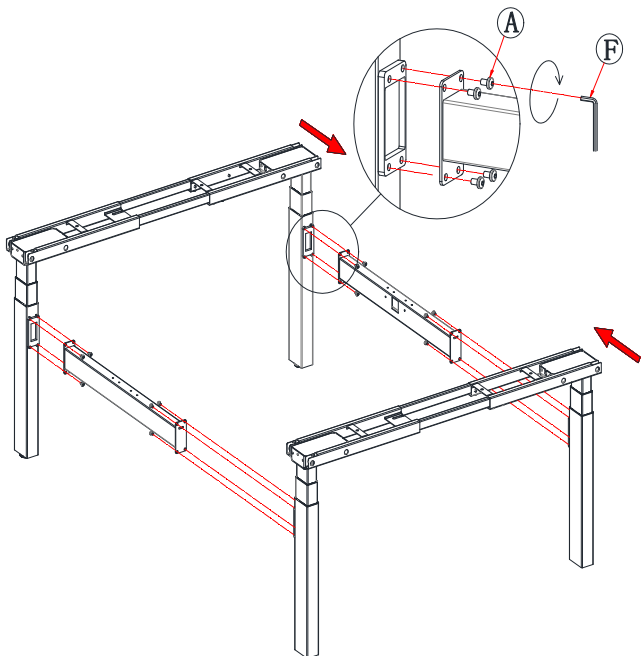

Attach the Side crossbeam (part 7) to the Lifting leg (parts 1 and 2) using (part A) Screw M6x10.


Parts Included			Qty
A	Screw M6x10		56
B	Screw M6x16		8
C	Screw M6x45		8
D	Wood screw ST4.8x16		30
E	Wood screw ST4.2x16		4
F	Allen wrench 4mm		1
G	Cable clip		10
H	Control box		2
I	Power cable		2
J	Handset		2

Step 4

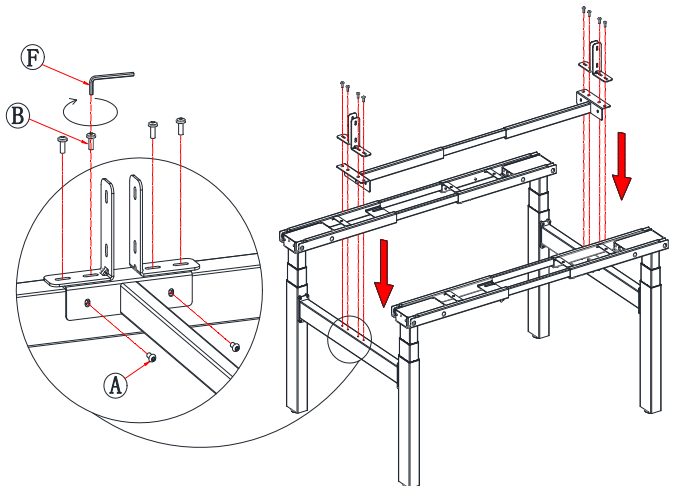


Attach Crossbeam (part 5) to the Side crossbeam (part 7) using (part A) Screw M6x10 and attach L-bracket (part 8) to the Crossbeam (part 5) using (part B) Screw M6x16.

Step 5

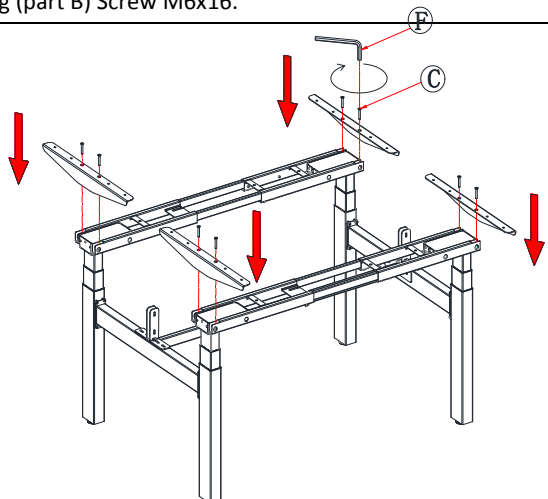


Attach the Side bracket (part 3) to the Crossbeam (part 4) using (part C) Screw M6x45.

Step 6

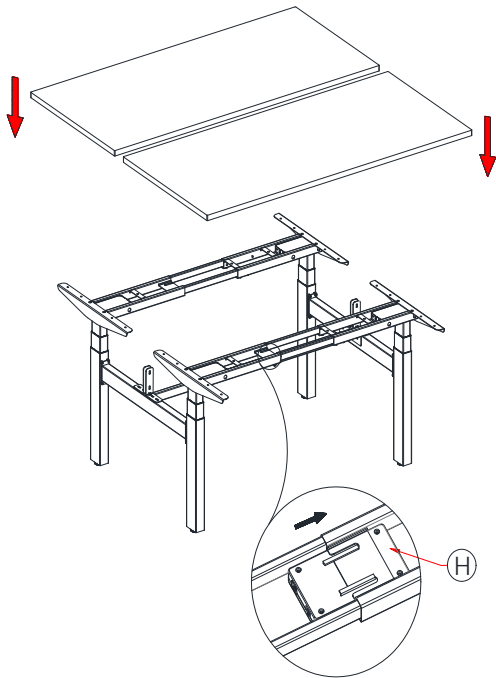


Attach the Control box (part H) to the Crossbeams.

Step 7

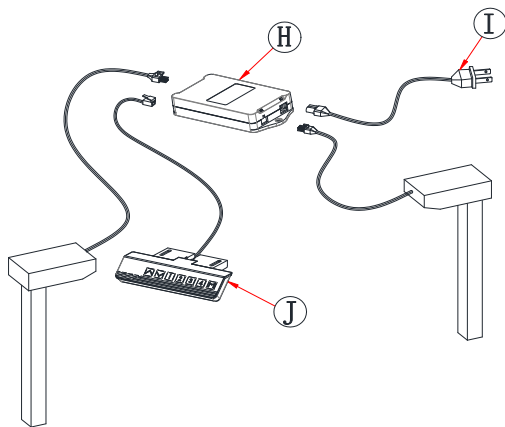


Connect the Lifting legs (parts 1 and 2), Handset (part J), and the Power cable (part I) to the Control box (part H) and plug. Press and hold the UP button until the desk goes to the max height.

Step 8

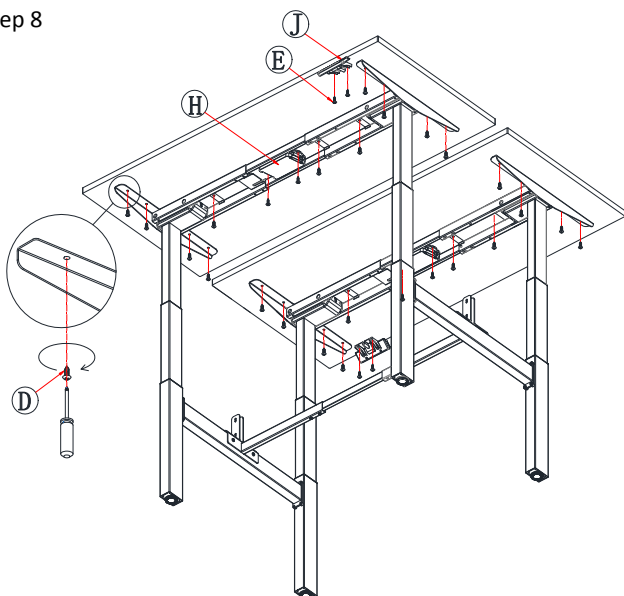


Adjust Crossbeams to the proper position to fit the desktop. Tighten the (part D) Wood screw ST4.8x16 to lock. Attach the Handset (part J) to the underside of the desktop using (part E) Wood screw ST4.2x16.

Step 9

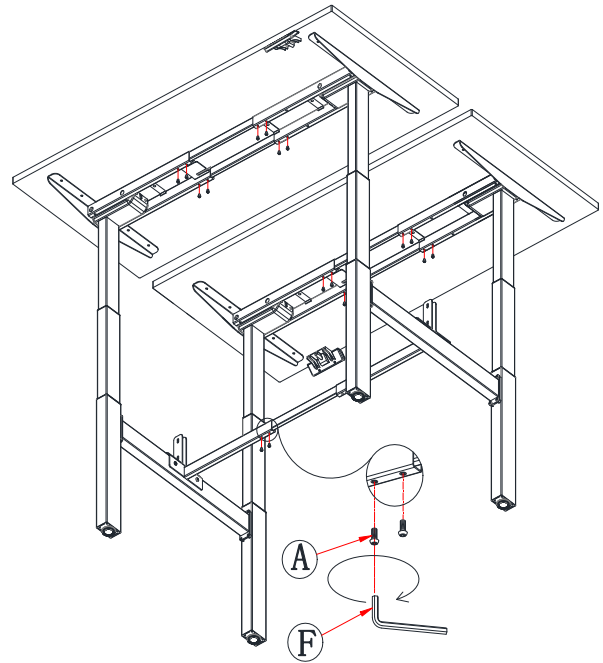

Tighten Crossbeams (part 4) using (part A) Screw M6x10 and tighten Crossbeams (part 5) to the Connecting beam (part 6) using (part A) Screw M6x10.

Step 10

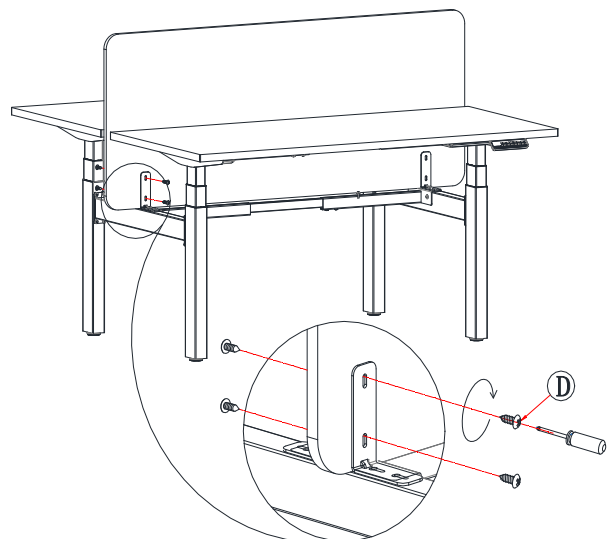

Attach the divider to the L-bracket (part 8). Tighten the L-shape divider bracket using (part D) Wood screw ST4.8x16.